


Pulse Oximetry Screening

For Critical Congenital Heart Defects (CCHD)

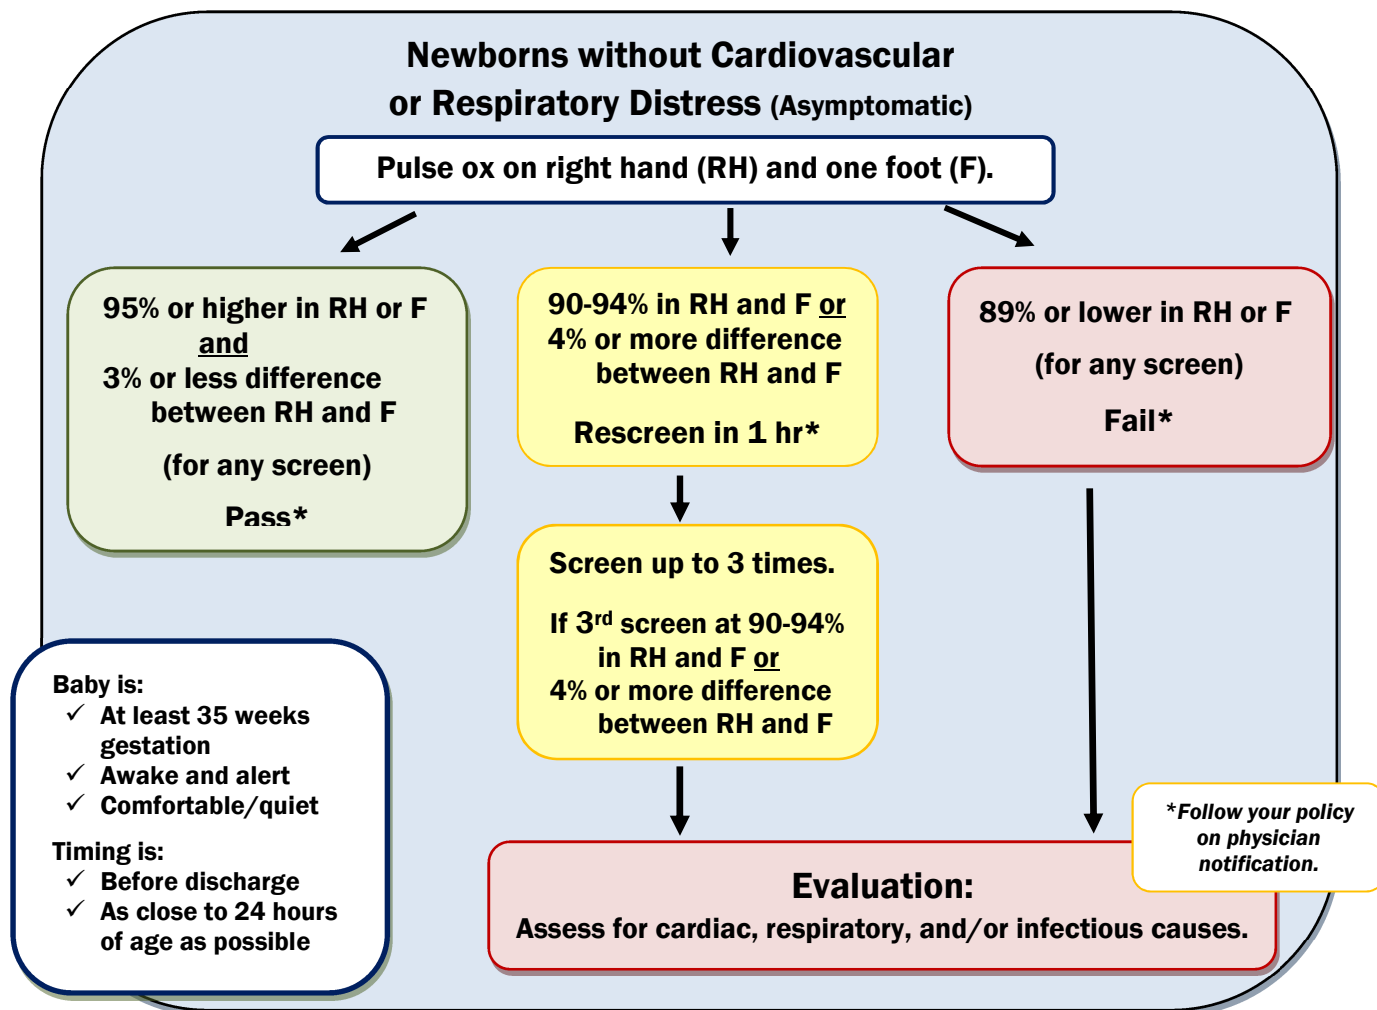

RIGHT HAND

Pre-Ductal Screen

Place the sensor on the back of the RIGHT HAND below the 4th or 5th finger. Wrap the tape around the hand. Align the emitter and the detector.



EITHER FOOT

Post-Ductal Screen

Place the sensor on the back of EITHER FOOT below the 4th or 5th toe. Wrap the tape around the foot. Align the emitter and the detector.



You might say:

Screen/Rescreen: "Pulse oximetry (pulse ox) is a way to check the oxygen level in the blood. It is painless and will only take a few minutes. If blood oxygen is a little low, we will recheck it later."

Fail: "Pulse ox showed that the blood oxygen level is low. The medical team needs to follow-up right away to find out why. Sometimes a low pulse ox result is a sign of health problems. If there is a problem, it's good to find out before your baby goes home."